



Unit 2, 36 Liverpool St
Ingleburn NSW 2565
Ph: +61 2 9605 6811
www.citylivingclotheslines.com.au

City Living Clotheslines

INSTALLATION INSTRUCTIONS

URBAN SERIES BIFOLD CLOTHESLINES




Tools Required:


- Masonry Drill with 10mm Masonry bit
- Scissors, pliers or knife (to trim cord)
- Sprit Level
- 13mm Spanner or Socket and Wrench
- Tape Measure
- Pencil

Contents

Right Hand Assembly – 1 off

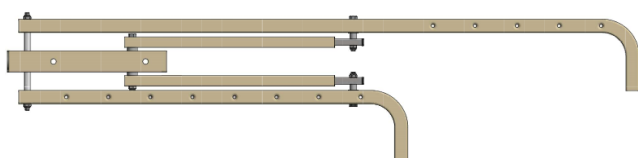

Left Hand Assembly – 1 off

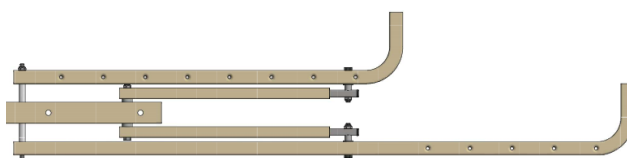

Remove nuts on the small arm and turn them around so that they resemble the drawings above.

****DO NOT OVER TIGHTEN THE NUTS****

Long Spreader Bar – 2 off



Short Spreader Bar – 2 off



Long Joiner – 2 off

****CLOTHESLINES LARGER THAN 2400mm****



Tek Screw (Clotheslines larger than 2.4m) must only be removed if the length needs to be adjusted

OR

Short Joiner – 2 off

****CLOTHESLINES 2400mm LONG OR LESS****



Nylon Anchor – 4 off



Screw – 4 off



Layout:

- Draw 2 vertical lines on the wall at a distance of 160mm less than the width of the clothesline purchased – e.g. for a 2400mm long line, mark at 2240mm, for a 3000mm line, mark at 2840mm. See Fig 1
- At a height level with the users head, draw a horizontal line intersecting the 2 vertical lines. Ensure both marks are level.
- Drill a 10mm hole into the brick, 60mm deep at each of the intersecting marks.

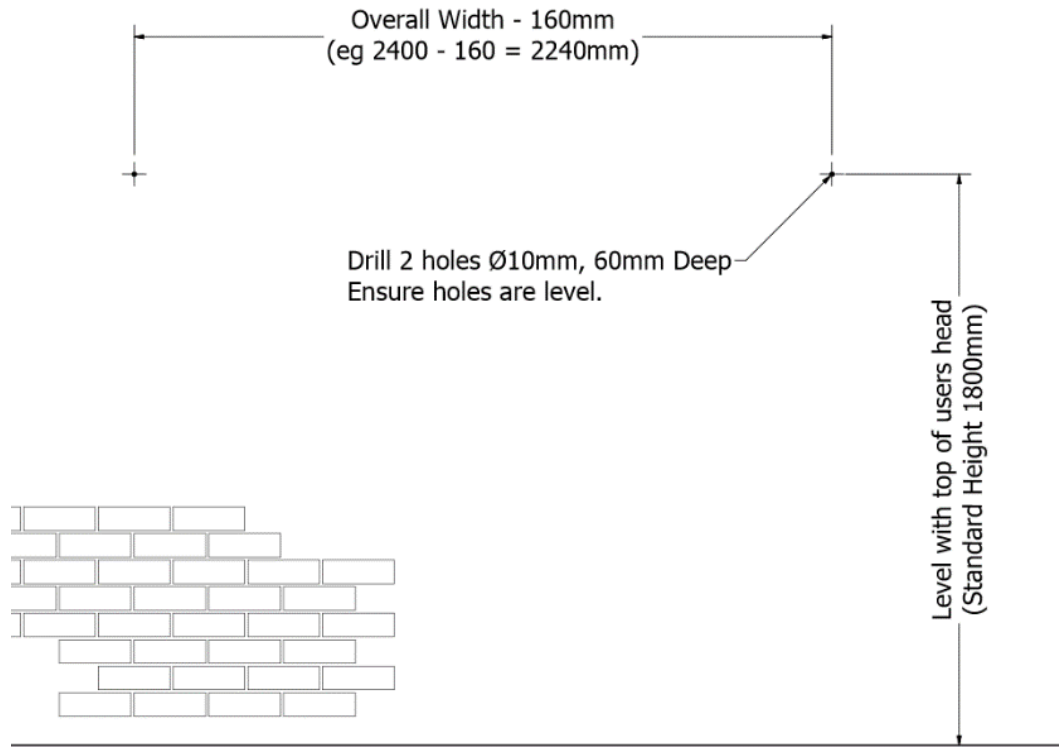


Figure 1 – Layout.

Assembly:

- Please Note: Inner BiFold Arm has been omitted for clarity.
- Each assembly is marked with a “Wall Side” sticker. Make sure this is placed against the wall. Align the top hole in the arm assembly bracket with the hole in the wall (Fig 2) and push the nylon anchor through the bracket and into the wall. Insert the screw, level the bracket and tighten the screw.
- Drill lower hole through the bracket, insert the anchor and screw, and tighten.



Figure 2 – Mount Arm Assembly

Assembly: (continued)

- Assemble the front bar. Insert the 2 spreaders into the joiner. (Holes in the spreader are only used for ground mount models.)
- Insert 1 end of the spreader into the mounted arm assembly (Fig 3). Slide the remaining arm assembly onto the spreader.

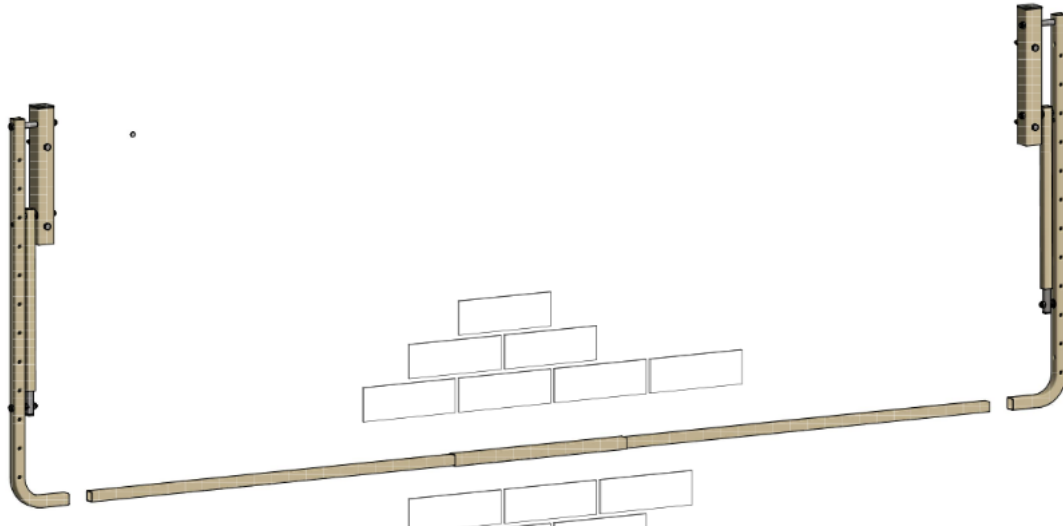


Figure 3 – Front Bar Assembly

- No screws are required to hold the spreader bar as the cord tension keeps everything in place.

TIP: you may need to use a rubber mallet or soft piece of wood to tap the spreader bar into the arms and ensure they are properly seated.

- Align the top hole of the arm assembly bracket with the remaining hole and push the nylon anchor through the bracket and into the wall. Insert the screw, level the bracket and tighten.
- Drill lower hole through the bracket, insert the anchor and screw, and tighten.


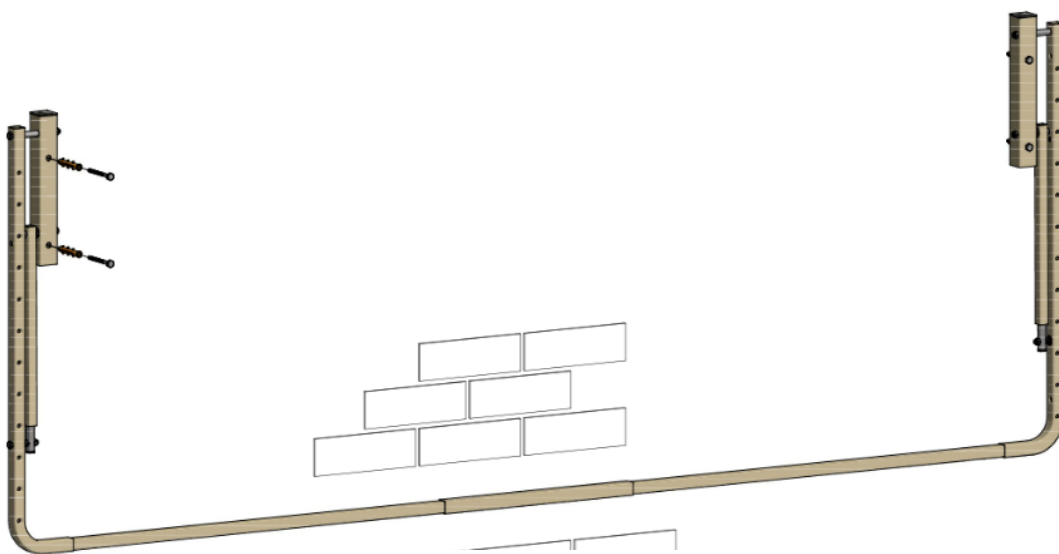


Figure 4 – Final Assembly

Feeding the cord:

- Unroll the cord.
TIP: Always keep hold of the loose ends as this will prevent tangles.
- Feed one end down the hole closest to the wall allowing approx. 300mm for tying.
- Tie off as shown in the Figs 6 and 7.
- Feed the cord through the remaining holes as shown in Fig 5.

Figure 5 – Feeding the cord

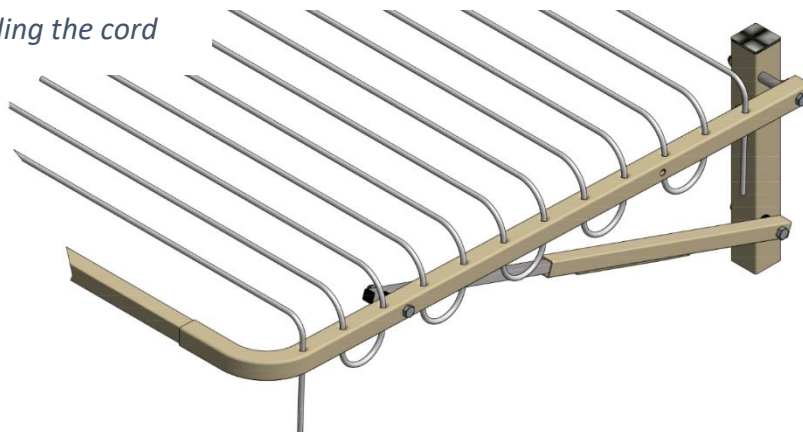

- To tension the cord, hold the free end tightly. Starting at the line closest to the wall, pull down firmly on the middle of the cord. Repeat the process on the next cord, working your way outwards removing any slack. Repeat the process until there is sufficient tension in the cord.
- Tie the loose end as shown in Figs 5 and 6. Trim the ends of the cord, leaving 100mm to be fed through the hole as shown in Fig 6.

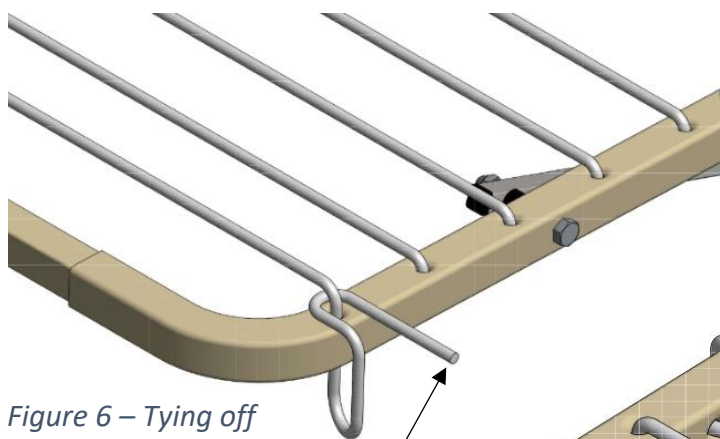


Figure 6 – Tying off

Pull Tight

Tie off with 2 half hitches,
trim line leaving 100mm
to feed through hole

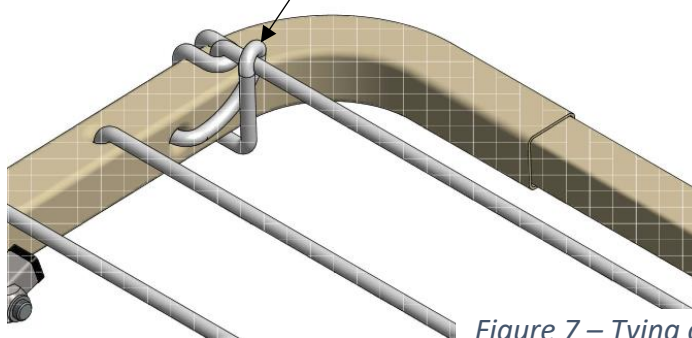


Figure 7 – Tying off

Warranty Details

City Living Clotheslines undertake the following guarantee for its manufactured products;

*Replacement of cord for a period of one (1) year from date of purchase.

*Replacement of any other component of the clothes line for a period of ten (10) years from the date of purchase.

This Guarantee is conditional as follows;

*Failure is due to faulty workmanship or faulty material, allowing for fair wear and tear.

*No evidence of misuse or maladjustment by the owner or any person using or repairing the product with or without the owner's consent.

*No cost will be borne by City Living Clotheslines for freight, postage, in-situ dismantling, replacement, re-assembling and adjustment of the product.

*Any malfunction of the product must be promptly reported to City Living Clotheslines for immediate attention to prevent further damage. When a user-generated problem is attended to by service Staff a service fee may be applicable.

This Guarantee exceeds and does not preclude any rights assured by the Trade Practices Act and any other State and Territory Laws.